




25 piece 4.8V Cordless Screwdriver with LED Manual

Controls and Components:

Pistol Driver:

1. Keyless Chuck
2. Led Light Switch
3. Led Battery Indicator Lights
4. Charging Port
5. Forward/Reverse Switch
6. AC Adaptor

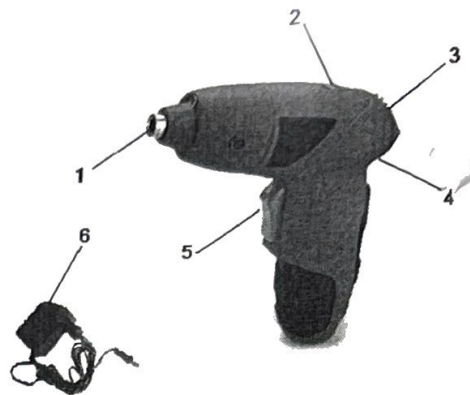

Charging the Battery:

1. Be sure to place the tool on a clean dry surface within 3 feet (1 meter) of a 110-120V(AC)/ 60HZ wall receptacle.
2. Insert AC adaptor into the Charging Port located on the back of the unit.
3. Plug the AC adaptor into the closer wall outlet.
4. Allow 2 to 5 hours for the battery to become fully charged.
5. Disconnect the unit after charging as the unit should be ready for use.
6. The amount of charge in the battery can be identified by the LED battery level indicator. Please make sure the AC adaptor is unplugged and the battery is not charging before you check the battery level.
 - a) When only red light is on, the battery level is low. Please charge it.
 - b) When only red and yellow lights are on, this means the battery level is about 50%.
 - c) When red, yellow and green lights are all on, this means the battery level is full.
 - d) When charging, only red light will be on. The charging time is usually 2 to 5 hours.
7. Insert the bit into the chuck until it snaps into place.
8. Grasp the tool firmly with both hands, align the bit with screw and press it firmly into the screw.
9. Start the tool by squeezing the Forward/Reverse trigger switch. (*Press the top of the switch to turn the screw Forward, Press the bottom of the switch to reverse the screw.)

Troubleshooting Tips:

Press the LED battery level indicator and be sure that the unit is fully charged, and you can charge the screwdriver at anytime.

Maintenance:

- *Use only mild soap and a damp cloth to clean the tool.
- *Do not allow any liquids to get inside the tool. Do not immerse any part of the tool in the liquid.
- * Battery should be fully charged before storage. Remember to charge regularly to make sure battery has a full charge. Battery may become damaged if left uncharged for a long period of time.

Specifications:

Pistol Driver:

Voltage: 3.6/4.8 Volts (DC)
Torque: 3 N.m
Speed (no load): 180 RPM/Min

AC Adaptor:

Input: 110-120Volts (AC)/60 Hz
Output: 6 Volts (DC)/300-400 mA
Charging time: 2 - 5 hours (max. 5 hours)
LpA: 63 dB (A)
LwA: 74 dB (A)
Vibration: 2.5 m/s²

Contact us through our website:

www.TeamCustomerService.com

If you have any questions, please contact us and we will be glad to assist you.